


Operating instructions

Posturemax & Posturemax 200

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED

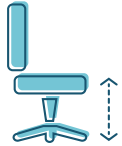

Chair Height Adjustment. The overall height of the chair is adjusted by twisting the paddle located below the seat on the front, right-hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower, simply twist the lever, put your weight back onto the seat and release the lever at the desired height.



Synchronised Recline Adjustment. The synchronised recline of the seat and back can be unlocked and adjusted by twisting the paddle located below the seat, on the front, left hand side. Please be aware that there is a safety feature that requires you to lean gently into the back of the chair before it will release. The seat and back can be locked into any one of four positions or they can be left unlocked to follow your movements. The tension of the recline can be adjusted by rotating the knob located below the seat on the right hand side.



Back Angle Adjustment. The angle of the back can be independently adjusted by lifting the lever located below the back of the seat on the right hand- side. The back can be locked at the required angle by pushing the lever down.



Back Height Adjustment. The back height is adjusted by lifting the back up a step at a time for correct positioning of the lumbar support. When the back reaches the top of its travel it will then drop back to the start position.



Height And Width Adjustable Arms. The arms have a paddle located underneath the outer edge of the pad. Lift the paddle, set the arm to desired height and release paddle to lock. The distance between the arms can be altered by releasing the locking levers under the seat edge and resetting the arms to desired position.



Sliding Arm Pad. The optional sliding arm pad can be unlocked by depressing the button located on the edge of the pad.

Operating instructions

Posturemax & Posturemax 200

ALL ADJUSTMENTS SHOULD BE MADE WHILST SEATED

Inflatable Lumbar Support. The inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate. Variable Contour Back The optional Variable Contour Back system consists of 3 air cells that can be inflated by squeezing the hand bulb located under the left hand side of the seat. There are 3 control buttons positioned low down the back, on the right hand side as seated. Each button controls air flow to a corresponding air cell. The buttons rotate 90 degrees to open or close the inlet valve and when pressed in they release air from the cell.

Seat Depth Adjustment. The depth of the seat can be adjusted by lifting the lever located under the back of the seat on the left hand side, sliding the seat to the desired position and releasing the bar to lock.